

# iWantit

## instruction manual



## wireless micro DAB Hi-Fi

iHBTDAB14





# contents

<b>safety warnings.....</b>	<b>5</b>
<b>unpacking .....</b>	<b>7</b>
<b>product overview .....</b>	<b>8</b>
front view .....	8
rear view .....	9
top view .....	9
<b>remote control .....</b>	<b>10</b>
<b>remove the plastic strip from the remote control.....</b>	<b>11</b>
<b>battery replacement for the remote control .....</b>	<b>11</b>
<b>remote control operation range .....</b>	<b>12</b>
<b>connections .....</b>	<b>12</b>
speaker connections .....	12
using the AUX connection .....	13
connecting to the mains supply .....	13
charging from the USB CHARGING port .....	14
playing MP3 from a USB device .....	14
<b>general operation.....</b>	<b>15</b>
powering ON/OFF.....	15
selecting modes .....	15
adjusting the volume.....	15
auto setting the clock.....	15
manually setting the time.....	15
setting the daily timer .....	16
to cancel the daily timer .....	16
setting the sleep timer .....	16
EQ control .....	17
system reset .....	17
<b>DAB operation.....</b>	<b>18</b>
full scan .....	18
manual tuning.....	18
secondary services.....	18
preset stations.....	19
recalling a stored station .....	19
DAB display modes.....	20

<b>FM operation .....</b>	<b>21</b>
switching from DAB to FM mode .....	21
auto scan .....	21
manual scan .....	21
audio mode .....	21
preset stations .....	21
recalling a stored station .....	22
FM display modes .....	22
<b>compatible disc types .....</b>	<b>23</b>
<b>CD operation .....</b>	<b>23</b>
playback .....	23
to pause playback .....	23
to stop playback .....	23
skipping to another track .....	23
repeat playback .....	24
random playback .....	24
programme setting .....	24
programme cancel .....	24
intro playback .....	24
<b>bluetooth® operation .....</b>	<b>25</b>
<b>USB operation .....</b>	<b>25</b>
<b>AUX operation .....</b>	<b>26</b>
<b>maintenance .....</b>	<b>27</b>
cleaning the unit .....	27
handling discs .....	27
cleaning discs .....	27
storing discs .....	27
<b>hints and tips .....</b>	<b>28</b>
<b>specifications .....</b>	<b>29</b>

# safety warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

## Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, unplug from the mains socket and consult your dealer.

## Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- This unit is designed for indoor use only.

## Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

## Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

## Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

## Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

## Safety

- Always disconnect the unit from the mains supply before connecting/ disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket before a lightning storm.
- In the interests of safety and to avoid unnecessary energy consumption, never leave the unit switched on while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Switch it off and disconnect the mains plug from the mains socket.

## Mains Cable

- Make sure the unit or the unit stand is not resting on top of the mains cable, as the weight of the unit may damage the cable and create a safety hazard.

## Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause distorted sound.

## Batteries

- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the remote control. Seek medical advice if you believe a cell has been swallowed.
- Please dispose of batteries correctly by following the guidance in this manual.
- Do not expose the battery to direct sunlight or sources of excessive heat.

## Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the unit’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

## Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

## Maintenance

- Ensure the unit is fully unplugged from the power supply before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit’s surface.
- Do not use liquids to clean the unit.

# Thank you

for purchasing your new iWantit wireless micro DAB Hi-Fi.

We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

 
Read all the safety instructions carefully before use and keep this instruction manual for future reference.

---


## unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.


The following items are included:

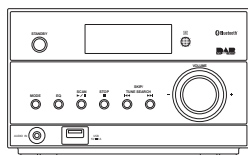


The Main Unit

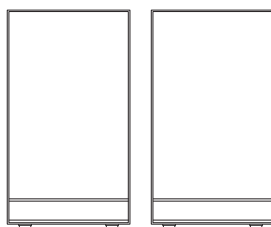 


Speakers x 2

 

Remote Control

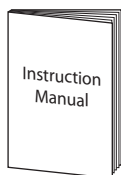 

Instruction Manual

 


Quick Start Guide



If items are missing or damaged, please contact Partmaster (UK only).  
Tel: 0844 800 3456 for assistance.

# product overview

 
## front view

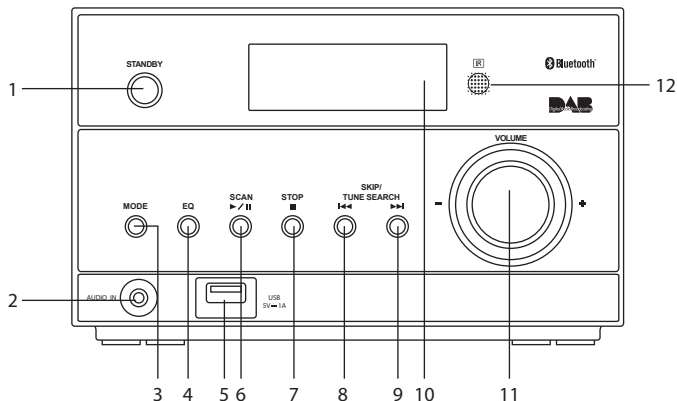

1. **STANDBY Button**  
Switch the unit between the **ON** and **STANDBY** modes.
2. **AUDIO IN Socket**  
Connects to an external audio device.
3. **MODE Button**  
Switch between **DAB, FM, CD, USB, AUX** and **Bluetooth** modes.
4. **EQ Button**
5. **USB 5V = 1A Charging Port**
  - For charging external devices.
  - For MP3 playback.
6. **SCAN/▶/II Button**
  - Play/pause/resume playback.
  - Auto-scan in **DAB/FM** mode.
7. **■ Button**  
Stop playback.
8. **SKIP/TUNE SEARCH ◀◀ Button**
  - Skip backwards to the beginning of the track or to the previous track.
  - Allow fast reversing of the current track.
  - Search for a radio station going backwards through accessible radio frequencies.
9. **SKIP/TUNE SEARCH ▶▶ Button**
  - Skip forwards to the next track.
  - Allow fast forwarding of the current track.
  - Search for a radio station going forwards through accessible radio frequencies.
10. **Display**
11. **VOLUME +/- Dial**  
Increase or decrease the volume.
12. **Remote Control Sensor**  
Receive signal from the remote control.




 rear view

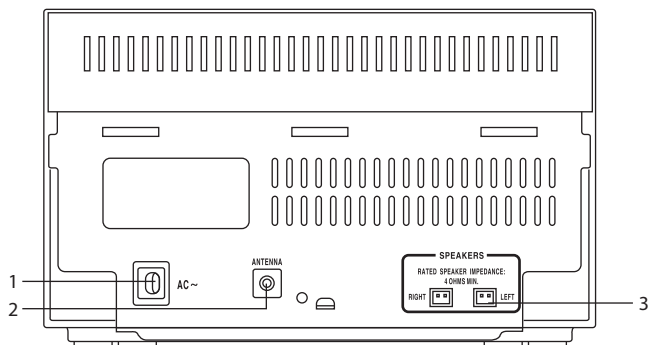

- 1. Mains Cable
- 2. FM Aerial
- 3. **SPEAKER (L/R) Sockets**

 
top view

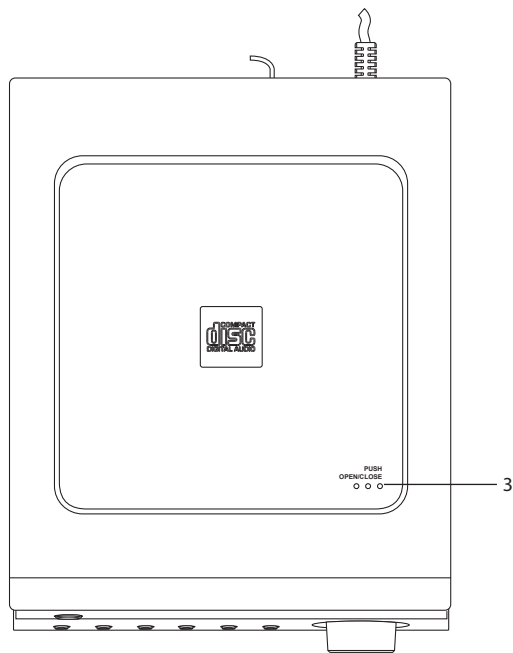

- 1. **OPEN/CLOSE Button**  
Open CD compartment.

# remote control

 
1. **STANDBY** Button  
Switch the unit between the **ON** and **STANDBY** modes.
2. **INFO** Button  
  - Display soundtrack playback information.
  - Display current radio selection information.
  - ID3 On/Off
3. **REPEAT** Button  
Repeat a CD track or a music file.
4. **◀◀** Button  
  - Skip backwards to the beginning of the track or to the previous track.
  - Allow fast reversing of the current track.
  - Search for a radio station going backwards through accessible radio frequencies.
5. **SELECT/MONO/ST.** Button  
Switch between mono or stereo in FM mode.
6. **PRESET/FOLDER** Buttons  
  - Select a preset station in DAB or FM mode.
  - Select a folder in USB mode.
7. **CLOCK** Button  
  - Press to show the clock.
  - Press and hold to enter clock setup in Standby mode.
8. **EQ** Button  
Select the EQ (Equaliser) mode.
9. **MUTE** Button  
Silence the unit or restore the sound.
10. **MODE** Button  
Switch between **DAB, FM, CD, USB AUX** and **Bluetooth** modes.
11. **MEMORY** Button  
  - Press to show preset stations in DAB or FM mode.
  - Press to programme preset station in DAB or FM mode.
  - Press to programme tracks in CD mode.

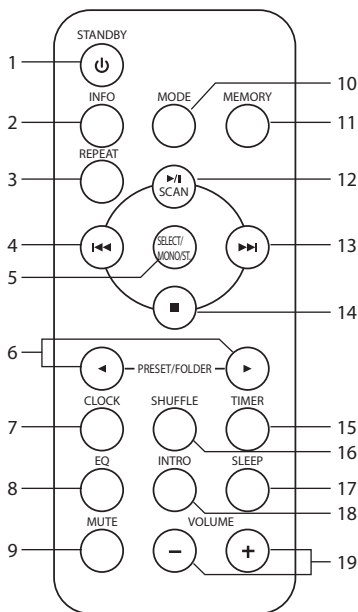

12. **▶II/SCAN** Button  
  - Play/pause/resume playback.
  - Auto-scan in **DAB/FM** mode.
13. **▶▶** Button  
  - Skip forwards to the next track.
  - Allow fast forwarding of the current track.
  - Search for a radio station going forwards through accessible radio frequencies.
14. **■** Button  
Stop playback.
15. **TIMER** Button  
Setup an alarm timer.
16. **SHUFFLE** Button  
Random playback of CD tracks or music files.
17. **SLEEP** Button  
Select a sleep timer.
18. **INTRO** Button  
Play soundtrack for 10 seconds.
19. **VOLUME +/-** Buttons  
Increase or decrease the volume.

## remove the plastic strip from the remote control

 
Remove the plastic strip from the battery if the battery is being used for the first time. It is located at the bottom rear of the remote control.

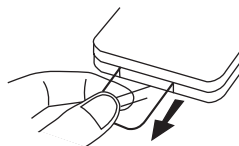

## battery replacement for the remote control

The remote control requires a CR2025, 3V Lithium battery.

 1. Slide and hold the battery release tab in the direction of the arrow.
2. Pull out the battery holder and remove the old battery.
3. Replace with a new battery.
4. Insert the battery holder back into the remote control.

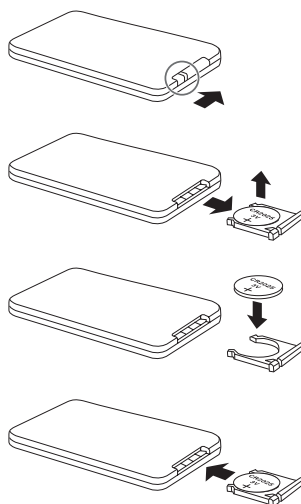

### Handling the Battery

- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Install the battery correctly in the battery compartment. Normally the battery's positive polarity (+) will face up.
- Use only the battery type indicated in this manual.
- Do not dispose of the used battery as domestic waste. Dispose of it in accordance with local regulations.
- Small button cell batteries such as the one used in the remote control are easily swallowed by young children and this is dangerous. Keep loose button cells away from young children and make sure that the battery is secure in the remote control. Seek medical advice if you believe a battery cell has been swallowed.

 


### Handling the Remote Control

- Take care of your fingernails when you slide and pull the battery release tab.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- When the battery is exhausted, the remote control will not function.

## remote control operation range


- The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 4 metres away and within a maximum of 60° arc.
- Please note that the operating distance may vary depending on the brightness of the room.

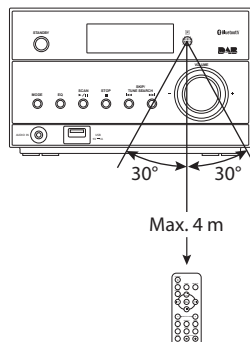

## connections


### speaker connections

 Connect the speaker cables at the back of the speakers to the **SPEAKER (L/R)** Sockets at the rear of the unit.

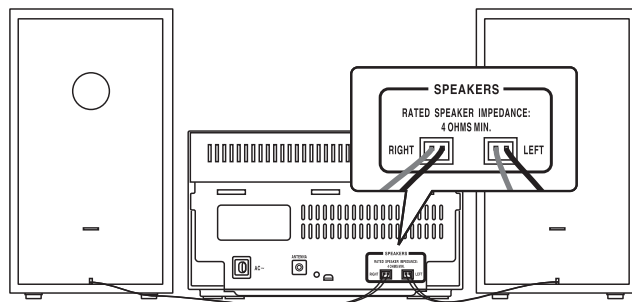


## using the AUX connection

 Use a 3.5mm to RCA stereo audio cable to connect the audio device's audio output sockets to the unit's **AUDIO IN** socket.

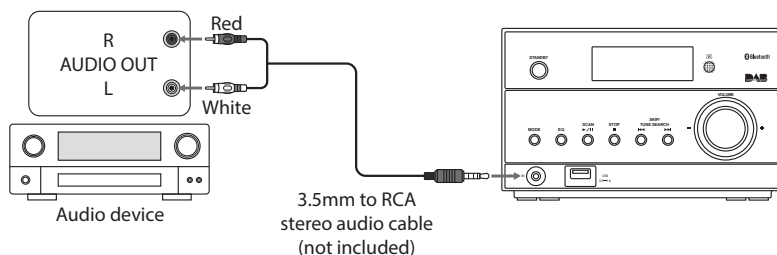

 Use a 3.5mm to 3.5mm stereo audio cable to connect the mobile device's headphone socket to the unit's **AUDIO IN** socket.

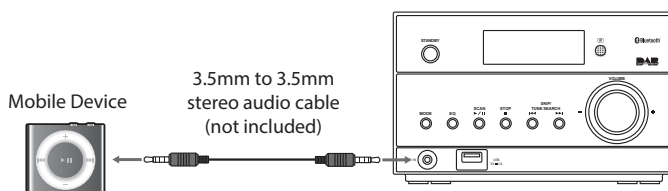


## connecting to the mains supply

- This unit is designed to operate with an AC power supply.
- Connecting the unit to any other power source may cause damage to the unit. Unwind the mains cable to its full length. Connect the mains plug to a mains socket. Make sure the mains plug is fully inserted into the mains socket. The unit is now connected and ready to use.
- To switch the unit off completely, unplug the mains plug from the mains socket.



 
Ensure all connections are connected before connecting to the mains power socket.

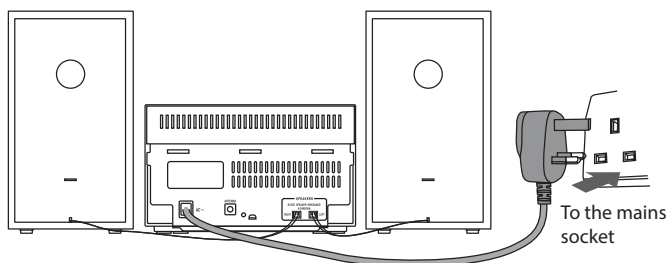

## charging from the USB CHARGING port


The **USB 5V  $\equiv$  1A** charging port is designed only for charging mobile devices (e.g. MP3 player, mobile phone, etc). It supplies 5V DC at a charging current of up to 1000 mA (1A).

 Use a USB cable (not included) to connect mobile device to the **USB 5V  $\equiv$  1A** charging port of the unit and the mobile device will start charging.

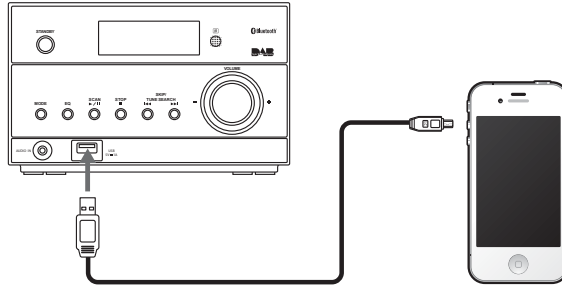

## playing MP3 from a USB device

 When a USB device is connected to the unit, press **MODE** repeatedly on the unit or press **MODE** on the remote control to select **USB** mode.

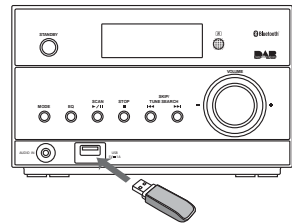

# general operation

## powering ON/OFF

When you first connect the unit to the mains socket, display will show the “**Scan Time 00:00:00**” and synchronize to the current local time if you can receive a DAB signal in your location. After approximate one minute, it will switch to **STANDBY** mode.

- Press **STANDBY** on the unit or the remote control to switch the unit to **ON** mode.
- Press **STANDBY** to switch the unit back to **STANDBY** mode.
- Disconnect the mains plug from the mains socket if you want to switch the unit off completely.



- When the unit is idle for approximately 15 minutes, it will automatically switch to standby.
- Please turn the unit off completely to save energy when not in use.

## selecting modes

Press **MODE** repeatedly to switch between **DAB, FM, CD, USB, AUX** and **Bluetooth** modes.

## adjusting the volume

- Turn the **VOLUME +/-** dial on the unit or press **VOLUME +/-** on the remote control to adjust the volume.
- If you wish to turn the sound off, press **MUTE** on the remote control. Press **MUTE** again or press **VOLUME +/-** on the remote control or turn **VOLUME +/-** to resume normal listening.

## auto setting the clock

The clock can be updated automatically if you can receive a DAB signal in your location. In order to synchronise to the current local time you must leave it on the DAB station for a short period of time.

## manually setting the time

1. During Standby mode, press and hold **CLOCK** on the remote control. The hour digits flash on the display.
2. Press **◀▶▶▶** to adjust the hour digits, and then press **CLOCK** to confirm. The minute digits will flash on the display.
3. Press **◀▶▶▶** to adjust the minute digits, and then press **CLOCK** to confirm.
4. The time is now set.



If you cannot received any DAB signal, you can manually set the time. Once DAB signal is received, the time will be automatically updated.

## setting the daily timer

1. Press and hold **TIMER** on the remote control until the display shows "On Timer", and the hour digits flash.
2. Press **◀▶▶▶▶** to adjust the hour digits, and then press **TIMER** to confirm. The minute digits will flash on the display.
3. Press **◀▶▶▶▶** to adjust the minute digits, and then press **TIMER** to confirm.
4. When On Timer Clock set, the display will show "Off Timer" and the hour digits will flash.
5. Press **◀▶▶▶▶** to adjust the hour digits, and then press **TIMER** to confirm. The minute digits will flash on the display.
6. Press **◀▶▶▶▶** on the remote control to adjust the minute digits, and then press **TIMER** to confirm.
7. Finally Press **◀▶▶▶▶** to select **DAB, FM, DISC** or **USB** mode, then press **TIMER** to confirm. The display will show "VOL#" and flash. Press **◀▶▶▶▶** to adjust the volume, and then press **TIMER** to confirm. "⏻" icon will show on the display to indicator the timer is on.
8. The Timer setting is now complete.

On Timer  
00:00

Off Timer  
00:00

Source  
DAB

VOLUME  
VOL 15

 
## to cancel the daily timer

Press **TIMER** on the remote control repeatedly to select **Timer Off** mode. The "⏻" indicator will disappear from the display.

## setting the sleep timer

Use the sleep timer to turn the system off after a certain number of minutes in play mode. By setting the sleep timer, you can fall asleep to music and know that your system will turn off by itself rather than play all night.

1. To set the sleep timer press **SLEEP** on the remote control repeatedly to view the different timer settings. The number of minutes shown will display in this sequence:



2. The system is now set to turn off after the number of minutes you have set. The display will show "**SLEEP #**", e.g. "**SLEEP 10**" means the unit will switch itself off after 10 minutes, "**SLEEP 20**" means the unit will switch itself off after 20 minutes, and so on.
3. Press **SLEEP** to show the reminding time till the unit switches off minutes and return back to previous screen.




4. To cancel the sleep timer press **SLEEP** repeatedly until "**Sleep Timer OFF**" shows on the display.

## EQ control

 This system supports a variety of equalizers and sound effects.

During playback, press **EQ** on the remote control to select a desired music mode. Each time **EQ** is pressed, the music mode will change to the next one as follows:



## system reset

There may be times when you need to reset your unit back to the factory settings especially when you have moved house. If you experience reception problems you may want to reset and try again. If you move to another part of the country and pick up the local and national DAB stations in that area, your previously tuned channels may no longer be available.

1. During DAB mode, open the CD door then press and hold **STOP** on the unit until the display show "**Restarting... FACTORY RESET**".
2. When successful reset, it will back to DAB mode.

Restarting...  
FACTORY RESET



After the system reset, all the tuned stations, FM/DAB preset stations will be erased.

# DAB operation

If the unit is connected to the mains power and then switched on from standby for the first time, the unit will automatically enter into the DAB mode and perform auto scan function. During the scan the display will show “**SCANNING...**” together with a slide bar that indicates the progress of the scan and the amount of stations that have been found so far. Once the scan has finished, the unit will select the first alphanumerically found station. To explore the found stations, press **◀◀▶▶▶**.

## full scan

The full scan will search for the entire DAB Band III channels. After the scan has finished, the first alphanumerically found station will be automatically selected.

 
1. To activate auto scan, press **▶II/SCAN** and the display will show “**SCANNING ...**” and a progressing slide bar.
2. All the stations that have been found will be stored automatically. To explore and listen to the found stations, press **◀◀▶▶▶** to select.



## manual tuning

As well as the auto tune function, you can manually tune the receiver. This can help you when aligning your aerial or when adding stations that were missed while auto tuning.

1. Press and hold **SELECT/MONO/ST.** to display the menu.
2. Press **◀◀▶▶▶** to cycle through the DAB channels, which are numbered from 5A to 13F.
3. After your desired channel number is selected, press **SELECT/MONO/ST.** to confirm. The display will show the multiplex.
4. Press **SELECT/MONO/ST.** again to add selected channel to station list.

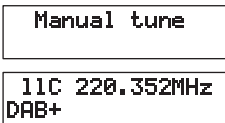

## secondary services

You may see a “>” symbol after the name of the station, this indicates that there are secondary services available to that station. These secondary services contain extra services that are related to the primary station. e.g. a sports station may want to add extra commentaries. The secondary services are inserted directly after the primary station in the station list.

To select the secondary station, press **SELECT/MONO/ST.** when the “>” appears in the display before the station name. When the secondary service ends, the unit will automatically switch back to the primary station.

## preset stations

You can store up to 30 of your favourite stations to the memory. This will enable you to access your favourite stations quickly and easily.

1. To store a preset, you must first be listening to the station that you would like to save, press and hold **MEMORY**. The display will show "**Preset Store <#: (Empty)>**".
2. Press **PRESET ◀▶** to select your desired preset station number.
3. The station will be stored in few seconds and the screen will then show "**Preset # Stored**".

## recalling a stored station

1. Once you have saved a station to one of the preset buttons, you can recall it by pressing **MEMORY**.
2. Press **PRESET ◀▶** until your desired station show on the display; then it will play in few seconds.



The stored stations will be saved into the memory and power off will not erase it. Storing a new station into a preset location will erase the previously stored station in that location.

# DAB display modes

Press **INFO** on the remote control, the display will switch through the following display modes.

The information of each display mode is displayed on the lower segment of the display.

## Ensemble

This displays the name of the multiplex that contains the station you are listening to. A multiplex is a collection of radio stations that are bundled and transmitted on one frequency. There are national and local multiplexes. Local ones contain stations that are specific to that area.



DAB – unlike normal radio, groups together several radio stations and transmits them on one frequency.

## Signal Strength

This shows a slide bar to indicate the signal strength, the stronger the signal, the longer the bar will be from left to right.

## Time / Date

This displays the current time and date provided automatically by the broadcaster.

## DLS (Dynamic Label Segment)

Dynamic label segment is a scrolling message that the broadcaster may include with their transmissions. The message usually includes information, such as programme details etc.

## Programme Type

 
This describes the “style” or “genre” of the programme that is being broadcast.

## Audio Bit Rate

The display will show the digital audio bit rate being received.

## Frequency

This displays the frequency of the present station, such as “11C 220.352MHz”.

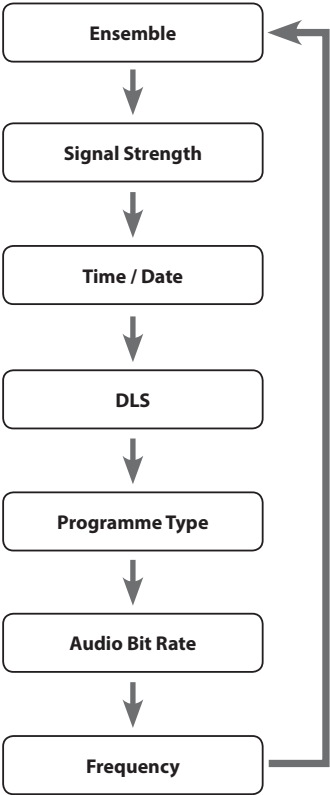

# FM operation

## switching from DAB to FM mode

To switch the unit to **FM** mode, Press **MODE** repeatedly to select FM mode. The display will show the frequency.

## auto scan

Press **SCAN/▶/II** until the tuner starts searching for a station. To scan down the frequency band, press and hold **SCAN/▶/II**. Once a station has been found, the scanning will stop automatically.



The search may not stop at a station with a very weak signal.

## manual scan

To search for FM stations manually, press **◀◀▶▶** repeatedly until your desired frequency is reached.



With FM radio it may be necessary to fine tune each station by pressing **◀◀▶▶** repeatedly. Each press/tap will adjust the frequency by 0.05MHz. If reception is still poor adjust the position of the aerial or try moving the radio to another location.

## audio mode

Press **SELECT/MONO/ST.** on the remote control to toggle between the Stereo or Mono selection.



The unit will automatically switch between stereo and mono mode, but you can override this and switch this function manually. This is helpful when receiving poor signal reception.

## preset stations

You can store up to 30 of your favourite stations to the memory. This will enable you to access your favourite stations quickly and easily.

1. To store a preset, you must first be listening to the station that you would like to save, press and hold **MEMORY**. The display will show "**Preset Store <#: (Empty)>**".
2. Press **PRESET ◀▶** to select your desired preset station number.
3. The station will be stored in few seconds and the screen will then show "**Preset # Stored**".

## recalling a stored station

1. Once you have saved a station to one of the preset buttons, you can recall it by pressing **MEMORY**.
2. Press **PRESET** ◀▶ until your desired station show on the display; then it will play in few seconds.



The stored stations will be saved into the memory and power off will not erase it. Storing a new station into a preset location will erase the previously stored station in that location.

## FM display modes

Press **INFO** on the remote control, the display will switch through the following display modes.

The information of each display mode is displayed on the lower segment of the display.

### Radio Text

This is a scrolling message displaying information about the current programme.

### Programme Type

 
This describes the “style” or “genre” of the programme that is being broadcast.

### Station Name




This displays the station name.

### Audio Type

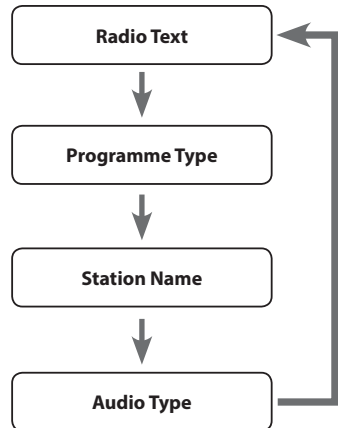This displays if the station being received is in mono or stereo.



## compatible disc types

Disc Types	Disc Logo	Recorded Content
CD-R (CD Recordable)		AUDIO
CD-RW (CD-Rewritable)		AUDIO
AUDIO-CD (Compact Disc Digital Audio)		AUDIO

## CD operation

Press **MODE** repeatedly to select **CD** mode.

### playback

1. Press "**PUSH OPEN/CLOSE**" on the disc cover and the disc cover will open automatically.
2. Place the CD with the label side up into the CD compartment, and then push down the CD compartment cover to close.
3. If there is no disc or the disc can't be read, "**NO DISC**" or "**Unknown Disc**" will show on the display.
4. The total number of tracks will display on the display, then press **SCAN/▶/II** to play the first track of the CD/MP3 disc automatically.
  - This unit can play CD, CD-R, CD-RW disc, 8cm.

### to pause playback

1. Press **SCAN/▶/II** to pause the playback.
2. To resume playback, press **SCAN/▶/II** again.

### to stop playback

Press **■** to stop playback.

### skipping to another track

- Press **◀◀▶▶** to skip backwards to the beginning of the track or previous track or skip forwards to the next track.
- Press and hold **◀◀▶▶** to perform fast forward/reverse playback.

## repeat playback

1. Press **REPEAT** once on the remote control, "**REP\_ONE**" will show on the display. The CD will play the current track repeatedly.
2. Press **REPEAT** twice, "**REP\_ALL**" will show on the display. The CD will play all tracks repeatedly.
3. Press **REPEAT** once more again, the **REPEAT** function will turn off.

REP_ONE	CD
T---01	00:07

REP_ALL	CD
T---01	00:07

## random playback

All tracks on the disc can be played in a random order.

1. During stop or playback mode, press **SHUFFLE** on the remote control. The "**RANDOM**" indicator will show on the display. All tracks will be played randomly.
2. Press **⏮⏭** to playback the next random track.
3. After all the tracks have played once, the playback will stop automatically.
4. To cancel random playback, press **SHUFFLE** during **RANDOM** playback. Normal playback will resume.

RANDOM	CD
T---13	00:00

## programme setting

User can program up to 32 tracks in CD mode or 64 tracks in MP3 in any desired order. Programme mode is activated while in **STOP** mode.

1. Press **MEMORY** to enter programme mode.
2. Press **⏮⏭** to select the track that you want to preset.
3. Press **MEMORY** to confirm the track.
4. Repeat steps 2-3 to programme more tracks. Once it is completed, press **SCAN/▶||** to start playback of the programmed tracks.

MEMORY	P-01
	T-01

## programme cancel

Press **■** twice, or open the CD door and close it again to erase the memory.

## intro playback

During playback mode

- Press **INTRO** on the remote control. The "INTRO" indicator will show on the display. The unit will play the first 10 seconds of each track.
- Press **INTRO** on the remote control again to resume normal playback.



# bluetooth® operation

The unit has a Bluetooth function that can receive a signal within 8 metres.

Pairing the unit with a Bluetooth device to listen to music:

1. While in the **ON** mode, press **MODE** repeatedly to select **Bluetooth** mode.
2. If the unit is not paired with any Bluetooth device, the display will flash "**BT LINK**".
3. Activate your Bluetooth device and select the search mode.
4. "**IHBTDAB14**" will appear on your Bluetooth device list.
5. Select "**IHBTDAB14**" and enter "**0000**" for the password if necessary.
6. To disconnect the Bluetooth function, switch to another function on the unit or disable the function from your Bluetooth device.



- If the signal strength is weak, your Bluetooth receiver may disconnect, but it will re-enter pairing mode automatically.
- For better signal reception, remove any obstacles between the unit and the Bluetooth device.
- This unit supports A2DP (Advanced Audio Distribution Profile) and AVRCP (Audio Video Remote Control Profile) functions. This can only be paired with one Bluetooth device at one time.
- Compatibility with all devices and media types is not guaranteed.
- Some mobile phones with the Bluetooth function may connect and disconnect as you make and end calls. This is not an indication of a problem with your unit.

# USB operation

1. When a USB device is connected to the unit, press **MODE** repeatedly to select **USB** mode.
2. The unit will automatically display the total number of tracks.
3. All playback features are the same as if you were playing an MP3 CD.



- The unit can only play MP3 file format in USB operation.
  - If your USB device is loaded with MP3's but the display keeps showing "NO" on the display, the format of your USB device might not be compatible with the unit.
  - This unit supports USB versions 1.1 and 2.0.
  - The unit can support USB devices with up to 32GB of memory.
  - The unit may not be compatible with all USB devices and memory cards, this is not an indication of a problem with the unit.
- 
- Press **REPEAT** once, "**REP\_ONE**" will show on the display, It will play the current track repeatedly.
  - Press **REPEAT** twice, "**REP\_ALBUM**" will show on the display. It will play the current folder repeatedly.
  - Press **REPEAT** three times, "**REP\_ALL**" will show on the display. It will play all files repeatedly.
  - Press **REPEAT** once more again, the repeat function will turn off.

## AUX operation

1. There is a **AUDIO IN** socket located at the front of the unit. Analogue audio sound signals from other sources can be input to the unit through this socket.
2. Connect the input to another audio device via an AUX cable (not included) with **AUDIO IN** socket.
3. Press **MODE** repeatedly to select **AUX** mode.
4. Turn **VOLUME** on the unit or press **VOLUME +/-** on the remote control to adjust the volume control for your desired sound output level.
5. In **AUX** mode, operate your audio device directly for playback features.



- When connecting the external audio device, refer to the owner's manual of the external device, as well as the manual.
- Examples of External Audio Device that can be connected to the unit are: Portable MP3 Players, Cassette Players, Mini Disc Players, DVD Players, etc.



### 4-hour playback:

1. If the unit is in **AUX** mode more than 4 hours, it will automatically switch to standby mode.
2. 10 minutes before entering standby, "**AUTO-OFF**" will flash on the display.
3. Press **INTRO** to continue cancel auto off function.

# maintenance

## cleaning the unit



Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray aerosol at or near the unit.

## handling discs

- Do not touch the playback side of the disc.
- Do not attach paper or tape to the disc.



## cleaning discs

- Fingerprints and dust on the disc cause sound deterioration. Wipe the disc from the centre outwards with a cloth. Always keep the disc clean.



- If you cannot wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray. They may damage the disc.

## storing discs

- Do not store discs in places subjected to direct sunlight or near heat sources.
- Do not store discs in places subjected to moisture and dust such as a bathroom or near a humidifier.
- Storing discs vertically in a case, stacking discs or placing objects on discs outside of their cases may cause warping.

## hints and tips

If a problem occurs, it may often be due to something very minor. The following table contains various tips:

Problem	Solution
<b>No power</b>	<ul style="list-style-type: none"> <li>• Ensure the mains cable is connected securely at both ends.</li> <li>• Make sure that the <b>ON</b> mode is selected.</li> </ul>
<b>The remote control does not function</b>	<ul style="list-style-type: none"> <li>• Use the remote control near the unit.</li> <li>• Point the remote control at the remote sensor on the unit.</li> <li>• Replace the battery in the remote control with a new one.</li> <li>• Remove any obstacles between the remote control and the unit.</li> </ul>
<b>The unit does not respond when pressing any buttons</b>	<ul style="list-style-type: none"> <li>• The unit may freeze up during use. Switch the unit off and then on again at the mains socket to reset the unit.</li> </ul>
<b>CD</b>	
<b>The disc does not play</b>	<ul style="list-style-type: none"> <li>• There is no disc inside the unit ("<b>No Disc</b>" appears on the display).</li> <li>• Insert the disc correctly with the label side facing up.</li> <li>• Clean the disc.</li> <li>• <b>PAUSE</b> mode may be activated, deactivate it.</li> <li>• A non-valid disc has been inserted.</li> <li>• Condensation may have formed inside the unit due to a sudden change in temperature. Wait about an hour for it to clear and try again.</li> </ul>
<b>Disc skips</b>	<ul style="list-style-type: none"> <li>• Make sure the unit is on a secure spot. Vibrations or jarring can cause the disc to skip.</li> </ul>
<b>Radio</b>	
<b>Desired station not found</b>	<ul style="list-style-type: none"> <li>• Weak signal. Use the Manual Tune function.</li> <li>• No DAB coverage in your area or poor reception. Adjust the position of the aerial.</li> </ul>
<b>USB</b>	
<b>USB port not charging</b>	<ul style="list-style-type: none"> <li>• Not all device are compatible with USB charging.</li> </ul>
<b>Bluetooth</b>	
<b>I cannot find "IHBTDA14" on my Bluetooth device.</b>	<ul style="list-style-type: none"> <li>• Ensure the Bluetooth function is activated on your Bluetooth device.</li> </ul>



If any functional abnormality is encountered, unplug the unit from the mains socket and reconnect it again.

## specifications

Model	<b>iHBTDAB14</b>
<b>Power</b>	
Power Supply	AC 100-240V ~50/60Hz
Power Consumption	26W
ECO Standby Power Consumption	< 1W
Output Power	5W x 2
USB Power	5V --- 1000mA
<b>Feature</b>	
Decoding Format	CD, CD-R, CD-RW
Connectivity	CD Compartment x 1, <b>USB 5V --- 1A</b> Charging Port x 1, <b>AUDIO IN</b> Socket x 1
Frequency Range	DAB 174-239 MHz FM 87.5 – 108 MHz
Compact Disc	Frequency Response: 20 Hz – 20 kHz
<b>Dimension</b>	
Unit	190 mm (W) x 237 mm (D) x 114 mm (H)
Speaker	113 mm (W) x 128 mm (D) x 196 mm (H)
<b>Net Weight</b>	
Unit	~ 1.6 kg
Speaker	~ 0.82 kg x 2

Features and specifications are subject to change without prior notice.







For general information about this appliance  
and handy hints and tips, please visit  
**[www.knowhow.com/knowledgebank](http://www.knowhow.com/knowledgebank)** or call **0844 561 1234**.



Visit [Partmaster.co.uk](http://Partmaster.co.uk) today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit [www.partmaster.co.uk](http://www.partmaster.co.uk) or call 0844 800 3456 (UK customers only) Calls charged at National Rate.

### Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste. For more information, please contact the local authority or your retailer where you purchased the product.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

All trademarks are the property of their respective owners and all rights are acknowledged.

DSG Retail Ltd. (co. no. 504877)  
Maylands Avenue, Hemel Hempstead, Herts., HP2 7TG, UK